

OPERATIONS CENTER




TURNING ON JD LINK CONNECTIVITY




Turning on JDLink Connectivity

1 Navigate to Operations Center


2 Click "Setup"

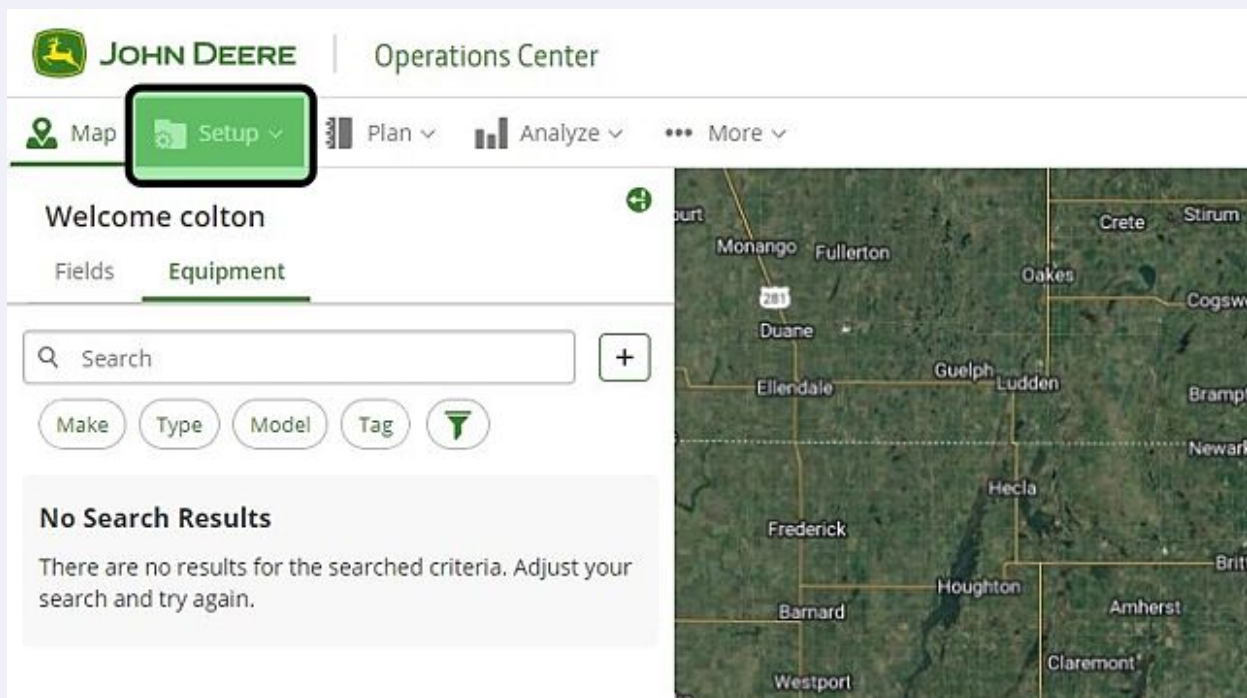


3 Click "Equipment"

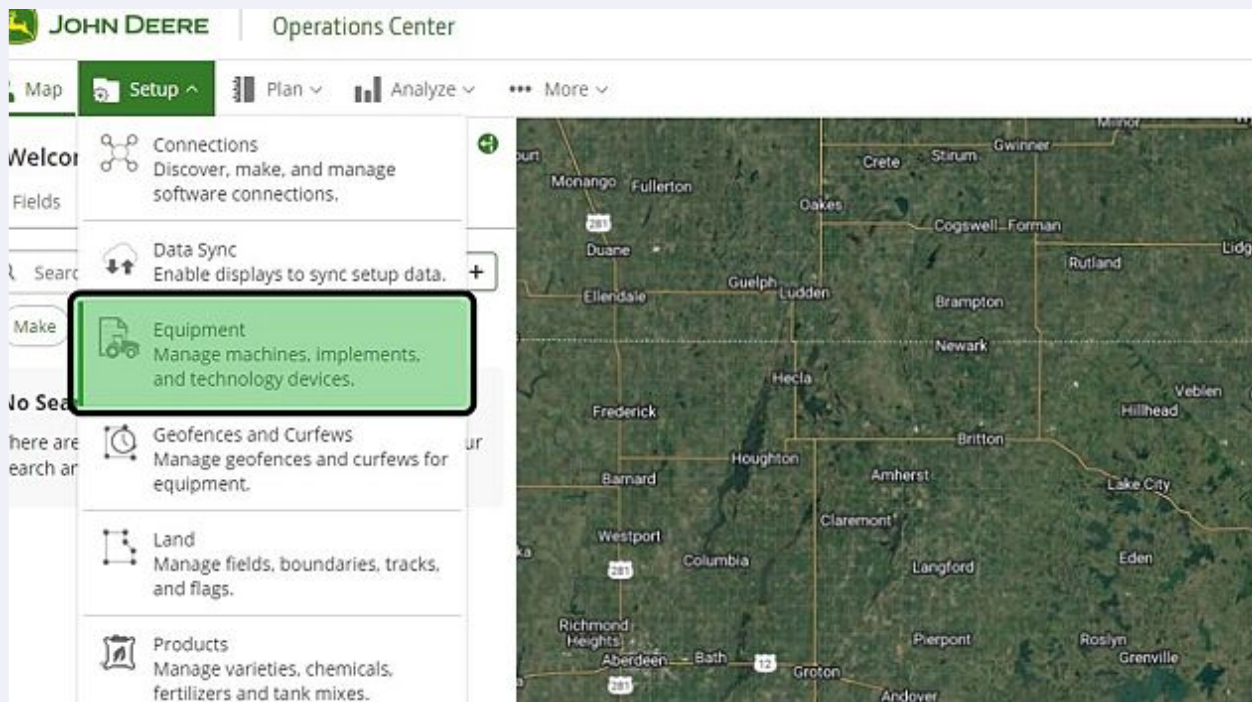


4 Select the drop down next to the current organization's name in the top right corner.

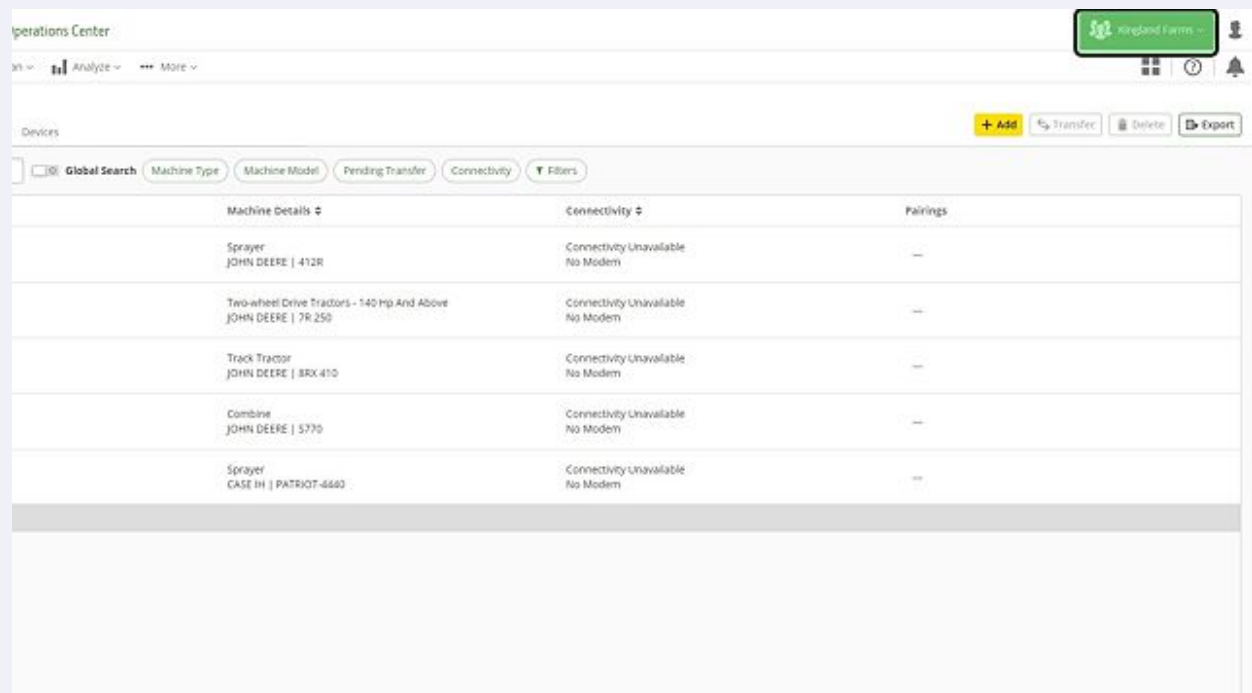


5 Select the Gear icon.

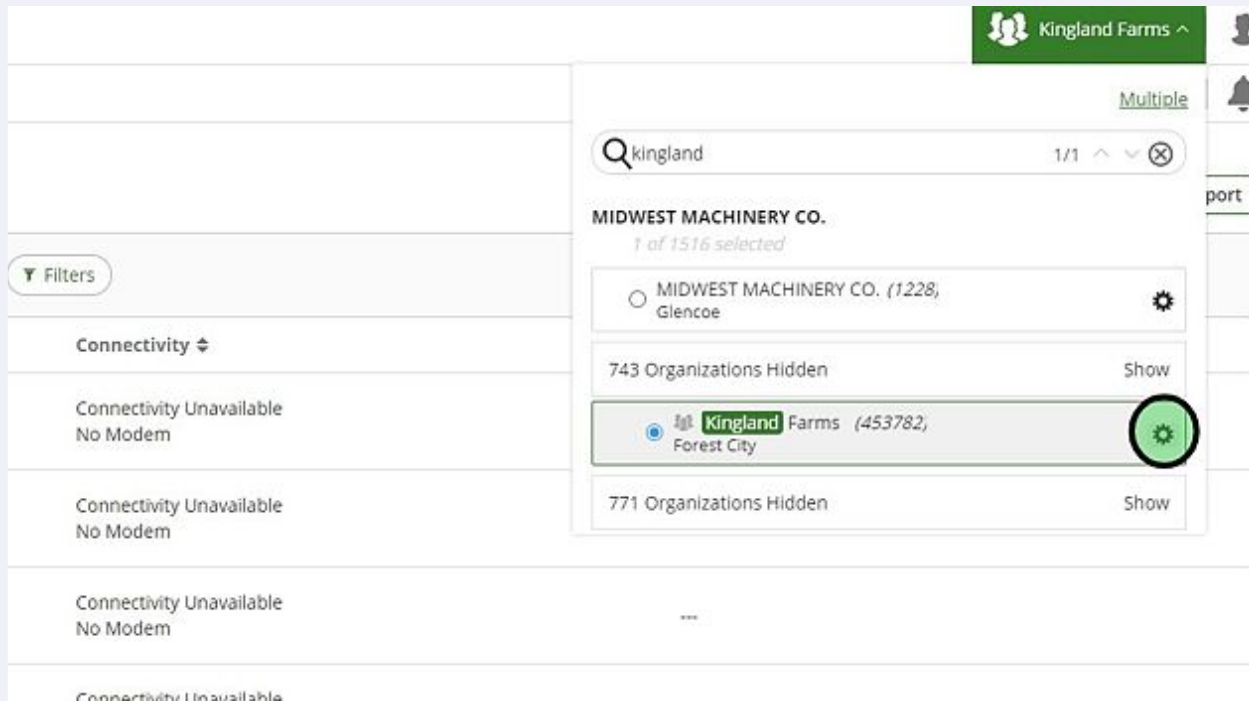


6 Select "Terms and Conditions"

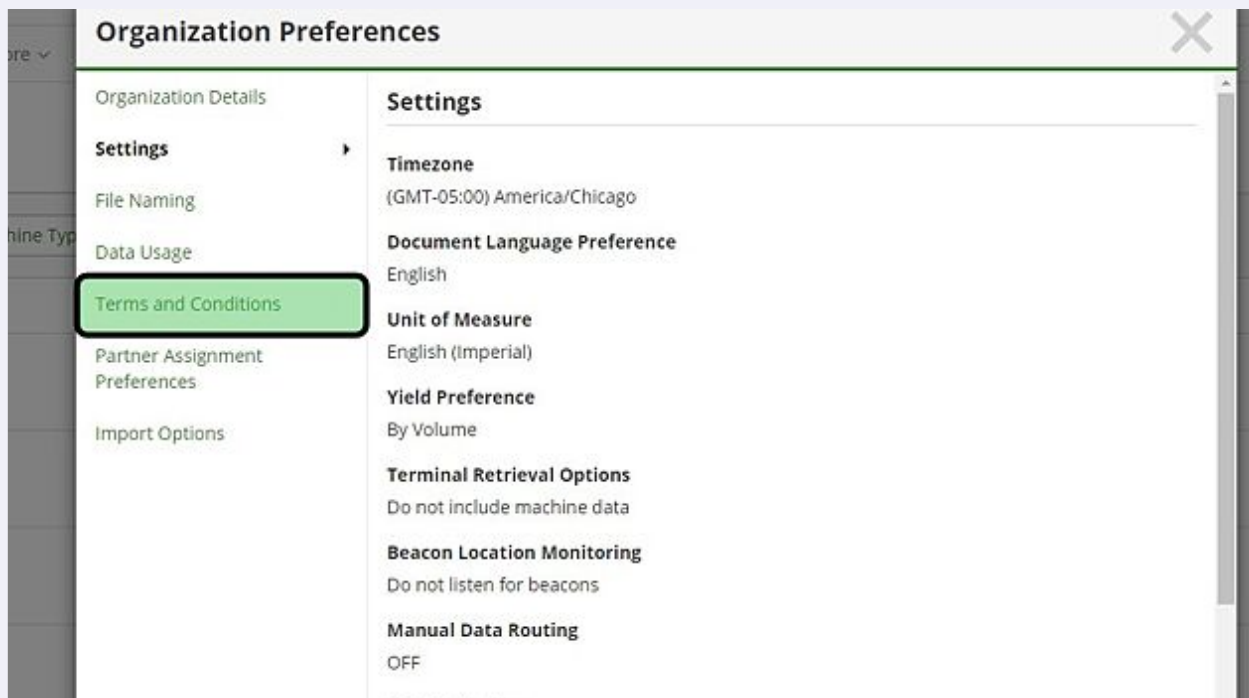


7 Select the drop down for JDLink Telematics Service Agreement.

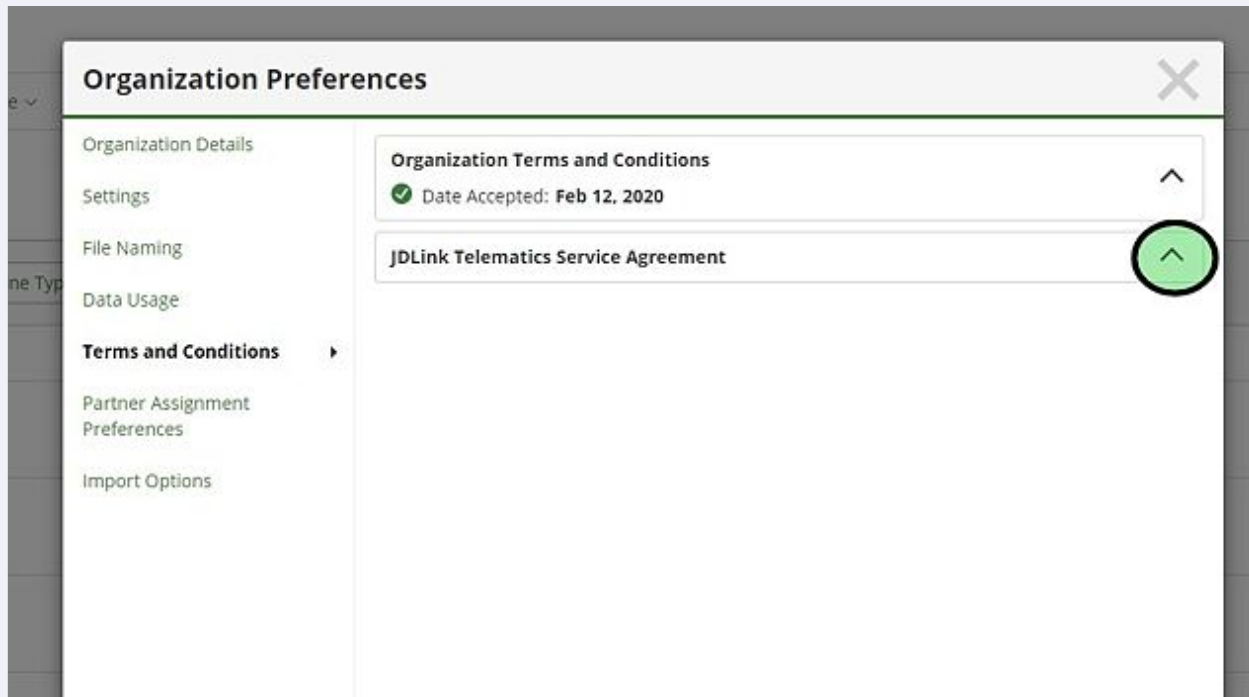

8 Check the box next to Automatic Enrollment to turn on.

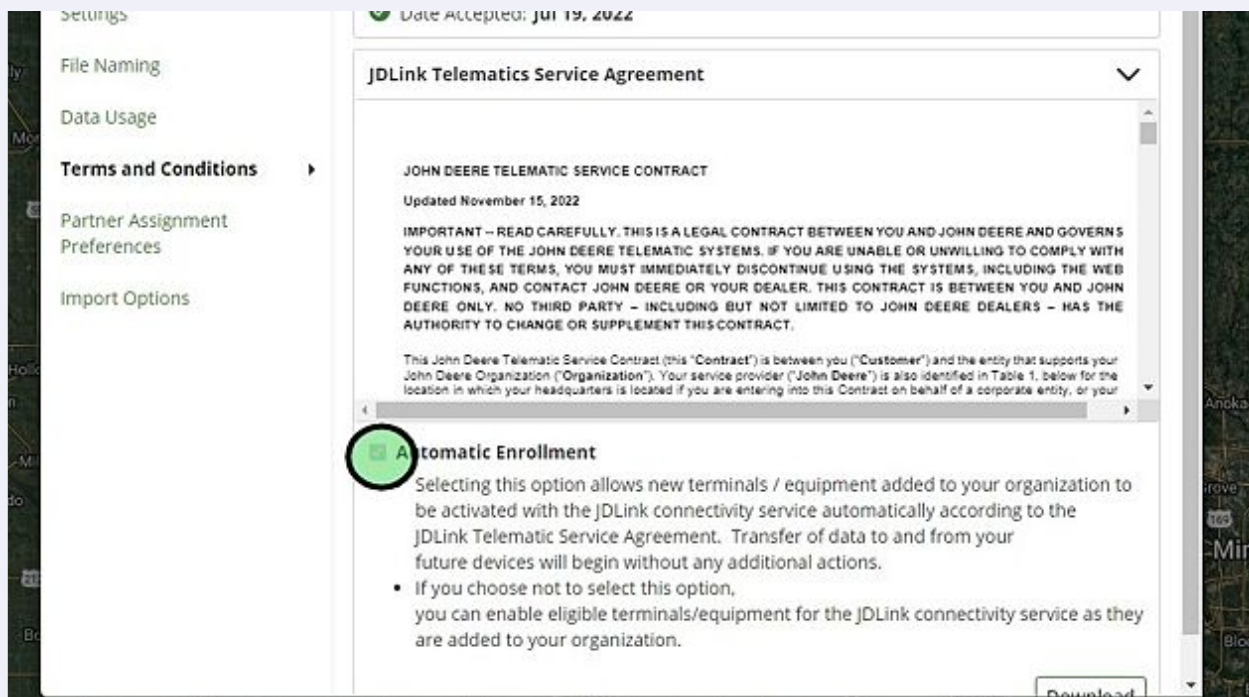


9 Close the pop up window

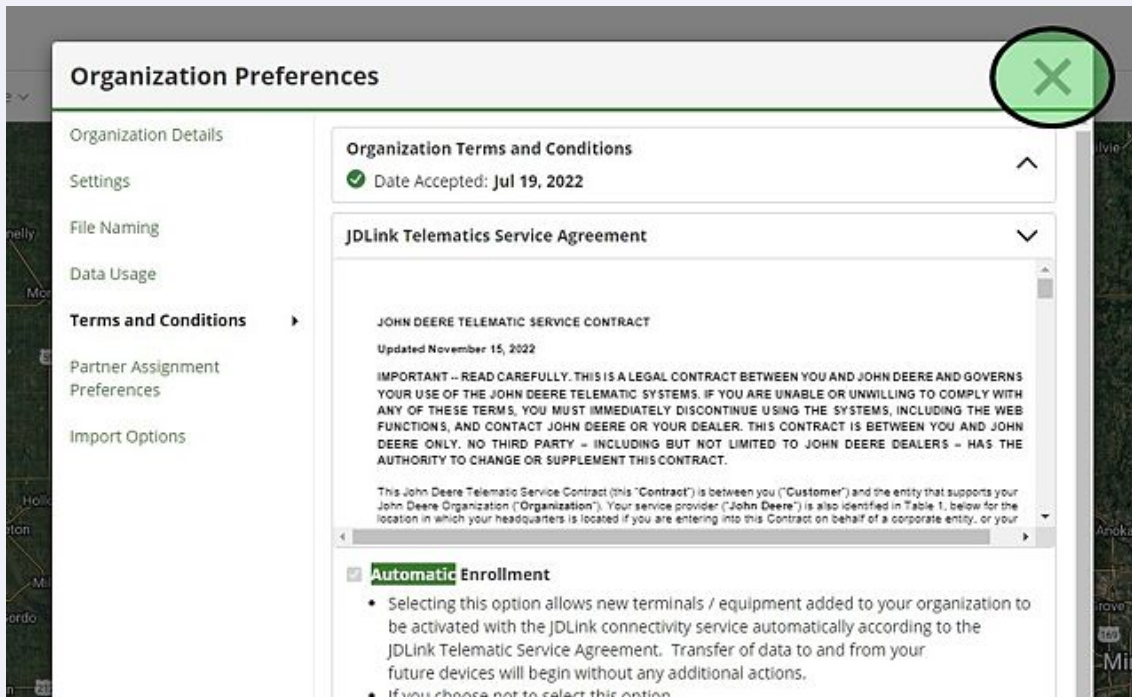


Verifying JDLink is Activated on Equipment

10 Click "Setup"

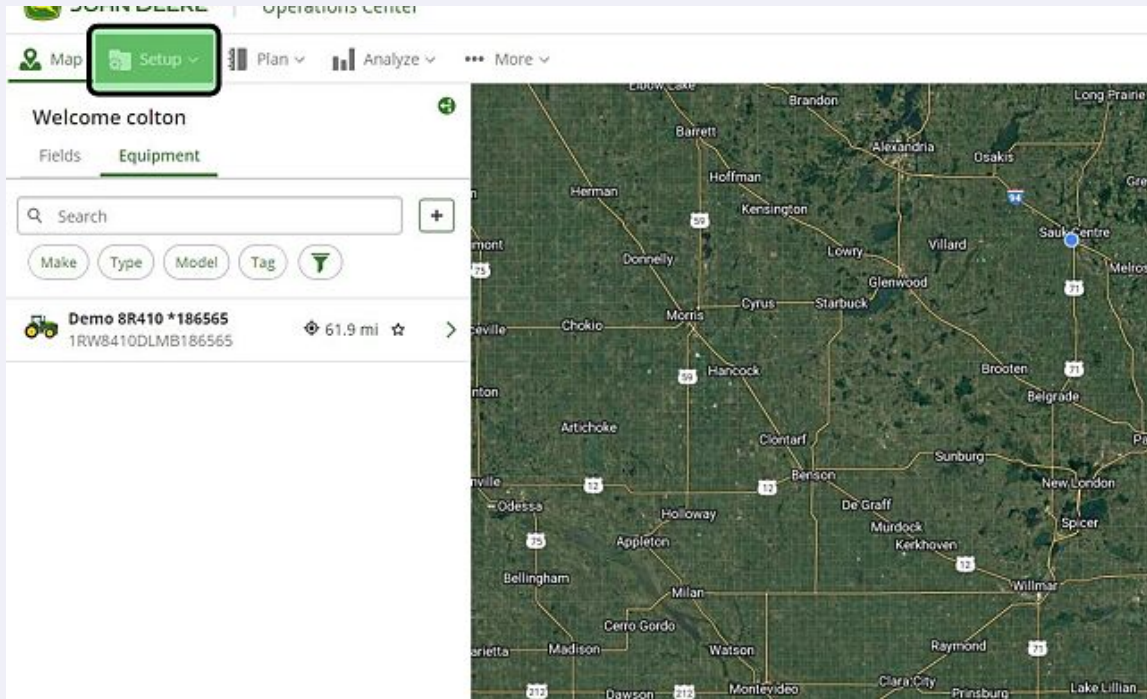


11 Click "Equipment"

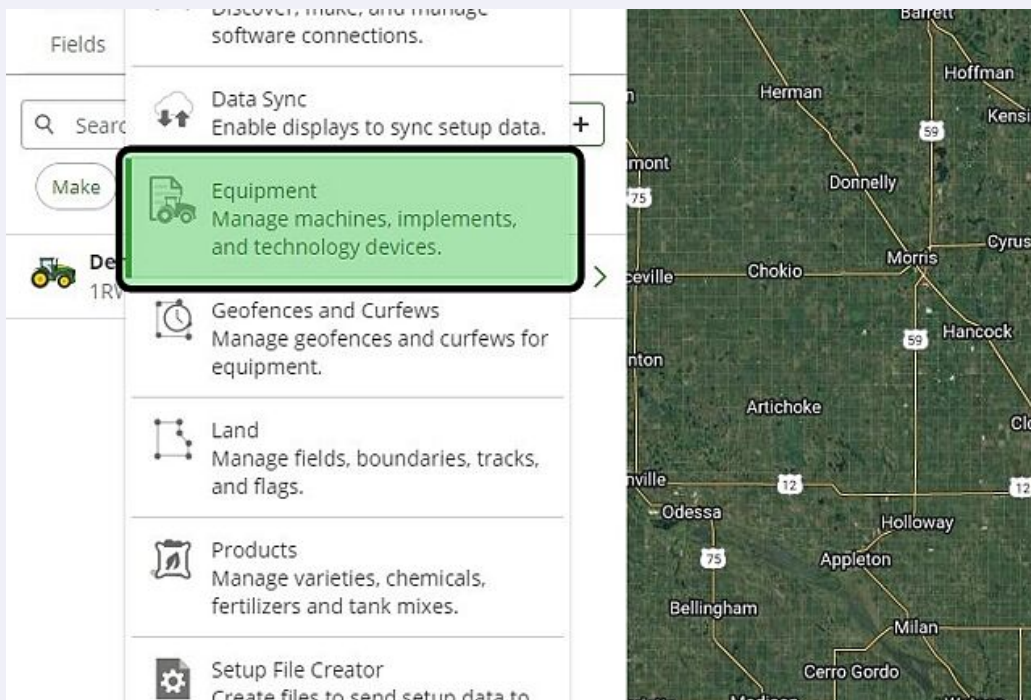

12

Verify that JDLink Connectivity is activated, and click on connectivity to see more information

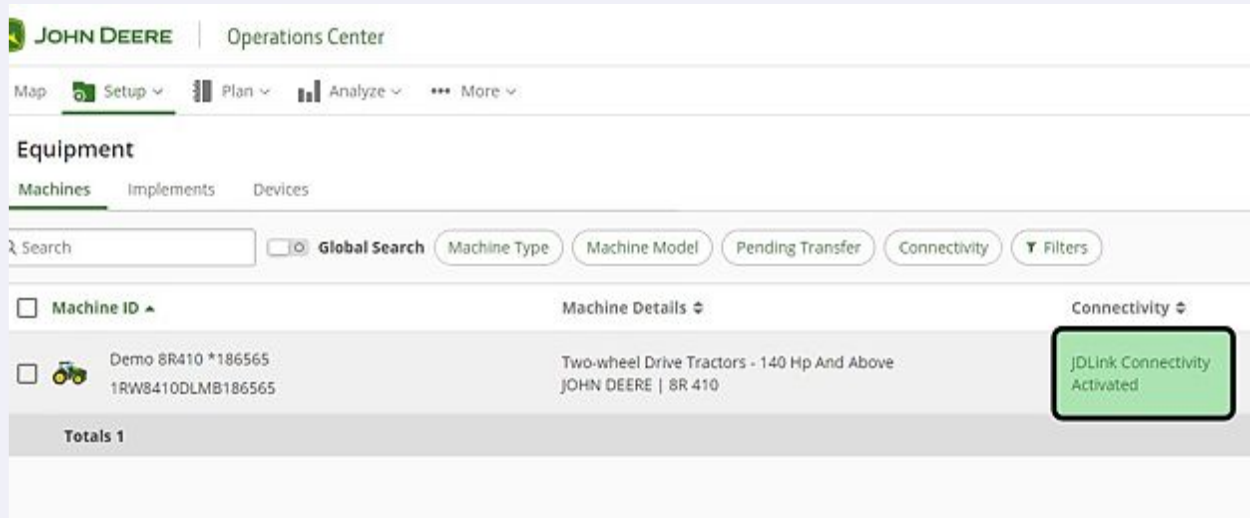

13

Verify the connection as well as current hours and last call in time at the bottom by clicking on the piece of equipment.

